

EUROCARD HOLDER



SKT 31

Screw terminals
31-pole (DIN 41617)
all

The D2 size is for a card without a front plate.
To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

[Link naar het product](#)

Afbeelding

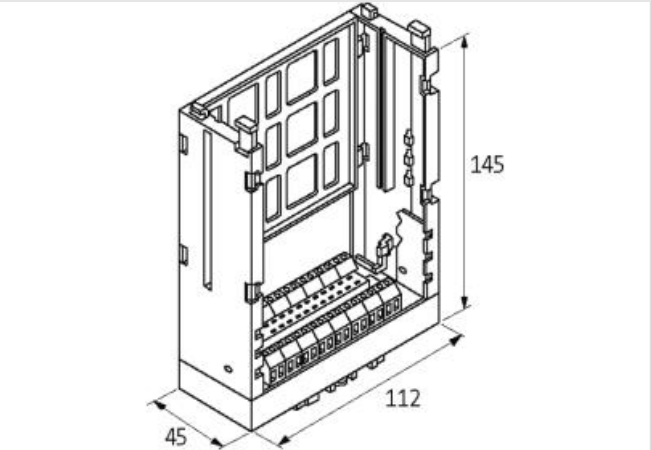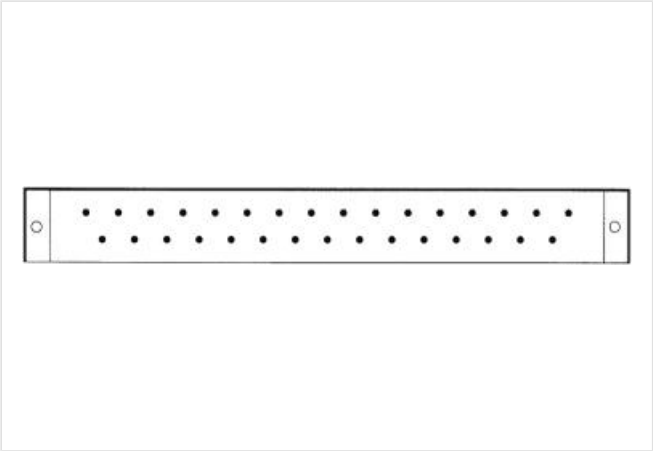

Product van afwijken van afbeelding



Commerciële gegevens	
ECLASS-6.0	27260710
ECLASS-6.1	27260704
ECLASS-7.0	27440402
ECLASS-8.0	27440402

ECLASS-9.0	27460201
ECLASS-10.1	27440402
ECLASS-11.1	27460201
ECLASS-12.0	27460201
ETIM-5.0	EC002780
Douane tarief nummer	85366990
GTIN	4048879042024
Verpakkingseenheid	1

Electrical data | Supply

Operating voltage AC	250 V
Operating current max.	5 A

Installation

Connection cross-section solid max.	4 mm ²
-------------------------------------	-------------------

Installation | Pin assignment

No. of poles	31
--------------	----

Device protection | Electrical

Overvoltage category (EN 60664-1)	I
-----------------------------------	---

Device protection | Media

Flame resistance	flame retardant
------------------	-----------------

Mechanical data

Type of socket connector	DIN 41617
--------------------------	-----------

Mechanical data | Material data

Material housing	Plastic
------------------	---------

Mechanical data | Mounting data

Mounting method	screwed, geschnappt
Suitable for mounting type	horizontal, vertical, mounting rail, (EN 60715)
Height	112 mm
Width	45 mm
Depth	145 mm